

 
 


why! W670SZQ1 Replacement LCD

Written By: Felice Suglia






Step 1 — Battery

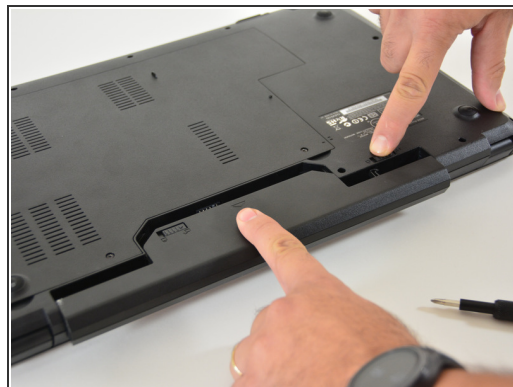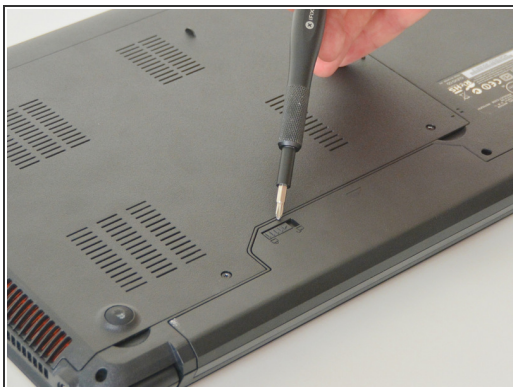


- Unlock the left latch.
- Unlock the right latch.
- Remove the battery while maintaining the unlocked latch.

   Step 2 — The LCD

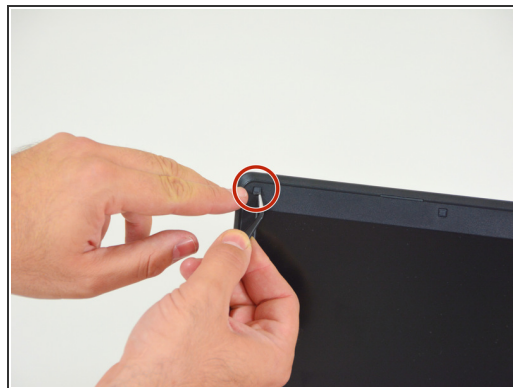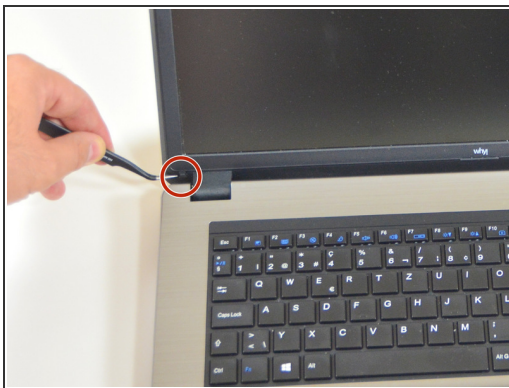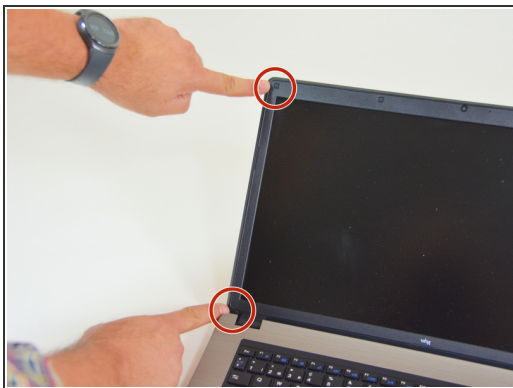

- Start by identifying the two screw covers on the left side of the screen.
- Remove the bottom cover screws.
- Then the top cover screws.

 Step 3

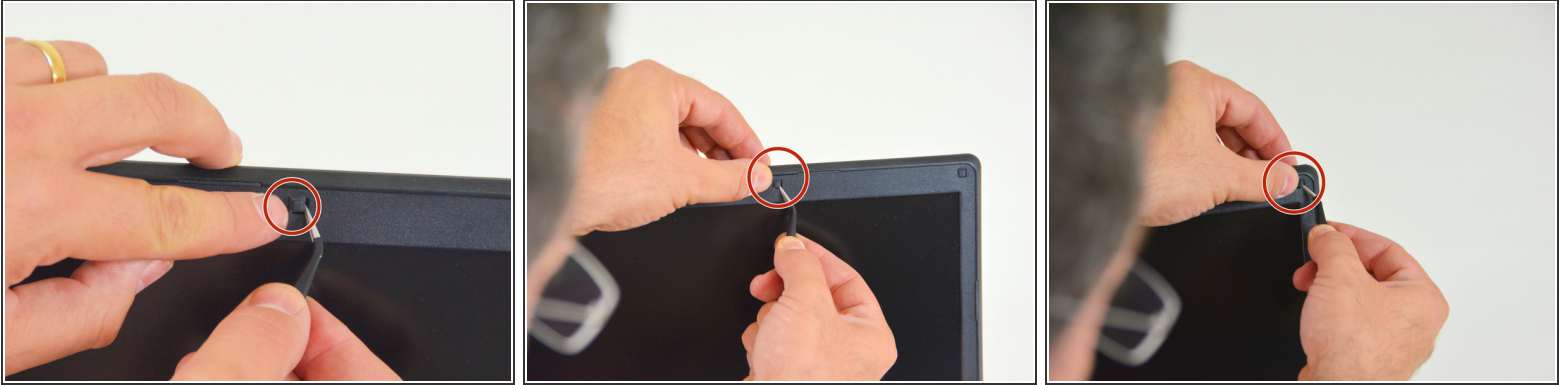

- Locate and then remove the first central cachce towards the upper part of the screen.
- Then the second central screw covers on the upper part of the screen.
- Locate and then remove the screw cover on the upper right side of the frame of the screen.

Step 4



- Then finally the lower right screw cover frame of the screen.
- Then unscrew the screws located behind the screw covers starting with the one located at the bottom left of the frame.
- Then in the top left.

Step 5



- Then the first central screw on the upper edge of the frame.
- Then the second central screw on the upper edge of the frame.
- Then one located in the upper right corner of the frame.

Step 6



 
- And finally the one on the lower right side of the frame.
- Then use your nails gently.
- To remove the frame of the LCD screen.

Step 7





- Then unscrew the screws on the front of the LCD.
- Then unscrew the screws on the right side of the LCD screen, starting with the first.
- Then the second.

Step 8

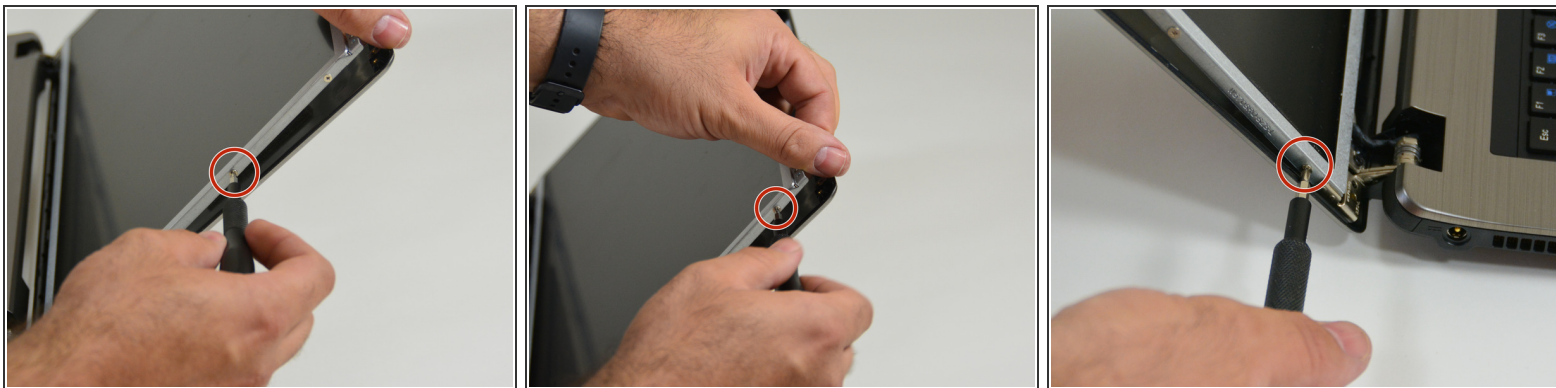




- Then the third.
- And finally the fourth.
- Then repeat these operations on the left side of the screen, starting with the first screw.

  Step 9

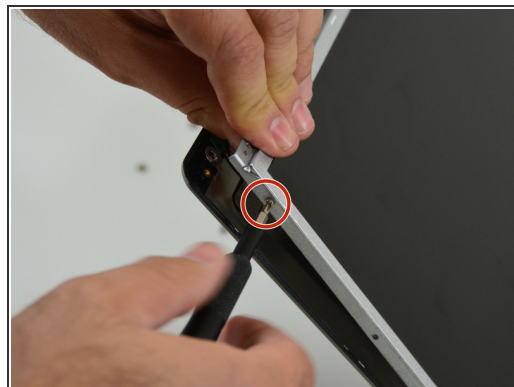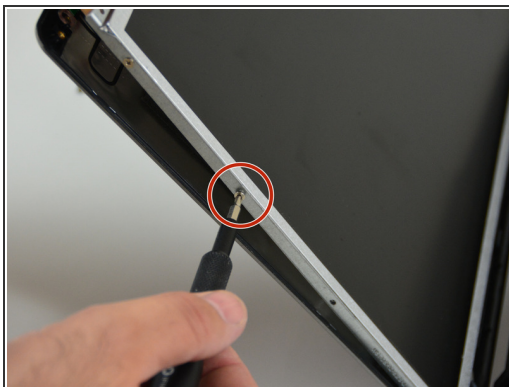



- Then the second.
- Then the third.
- And finally the fourth.

   Step 10

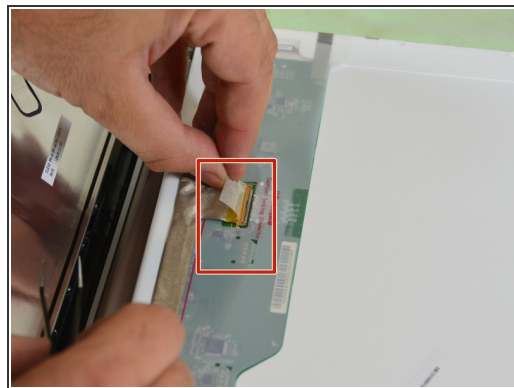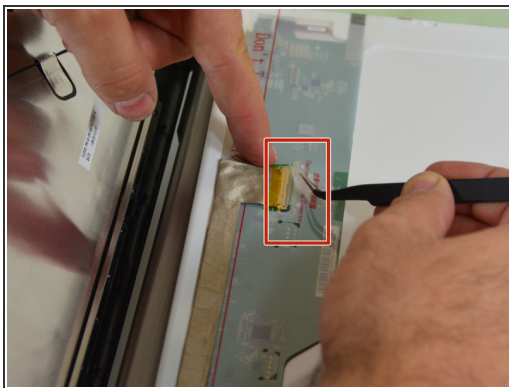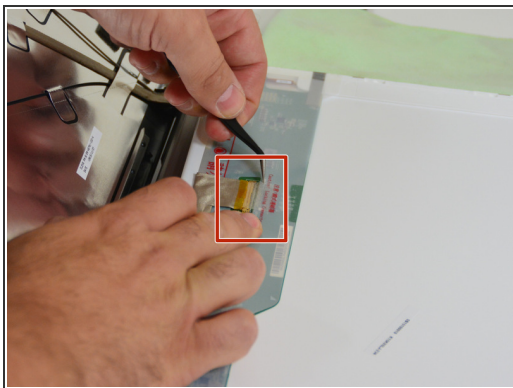

- Then flip the LCD.
- appears the connector to which is attached the connecting cable of the LCD screen.
- Then peel off the adhesive tape covering the connector.

  Step 11

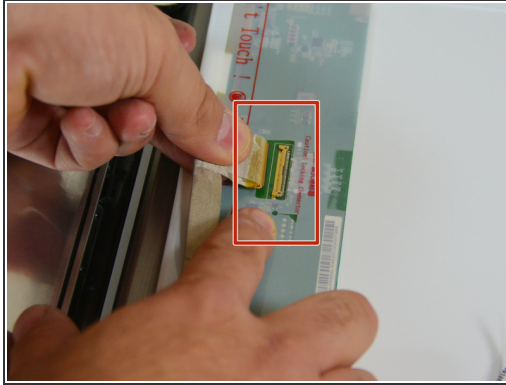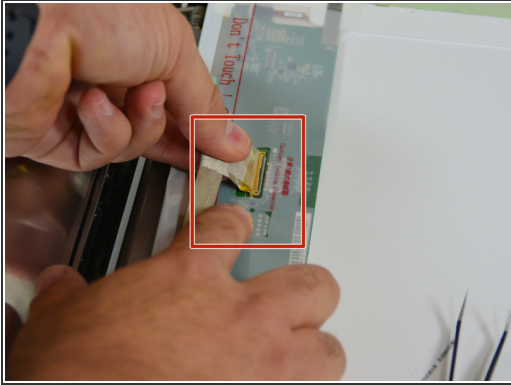

- Then remove the cable from the connector.
- Once disconnected cable you can release the LCD.

Pour réassembler votre appareil, suivez les instructions dans l'ordre inverse.

This document was last generated on 2017-06-21 08:01:17 PM.